

QUICK CARD

Updating Software via Ethernet

This quick card outlines how to upgrade the SmartClass 4800 or T-BERD/MTS 5800 to the latest software revision using a wired Ethernet LAN connection to the internet.

Note: Software may not be updated via Wireless LAN or Mobile hotspots. Units with software that is more than 2 major releases old, should not be updated via Internet. Please follow instructions on the **Updating Software via USB** quick card to step your unit up to the current software, two major revisions at a time.

EQUIPMENT REQUIREMENTS



Equipment Requirements:

- SmartClass 4800 or T-BERD/MTS 5800
- Wired Internet Connection
- CAT5E or better cable



Figure 1: Equipment Requirements

CONNECT TO INTERNET

1. Plug the T-BERD/MTS test set into AC power. You cannot update the software while running on battery.
2. Using CAT5E or better cabling, connect the T-BERD/MTS 5800 Ethernet Management Port on the side of the unit to an Ethernet LAN port providing internet access.
3. Tap the **System** icon  in the status bar at the top of the display to show the **System menu**.
4. Tap the **Network** icon .
5. Tap the **LAN** icon on the left screen side. If using DHCP, set **IP Mode** to **DHCP** and wait until unit obtains an IP address; otherwise set **IP Mode** to **Static** and configure a static IP address, Subnet Mask, and Gateway.

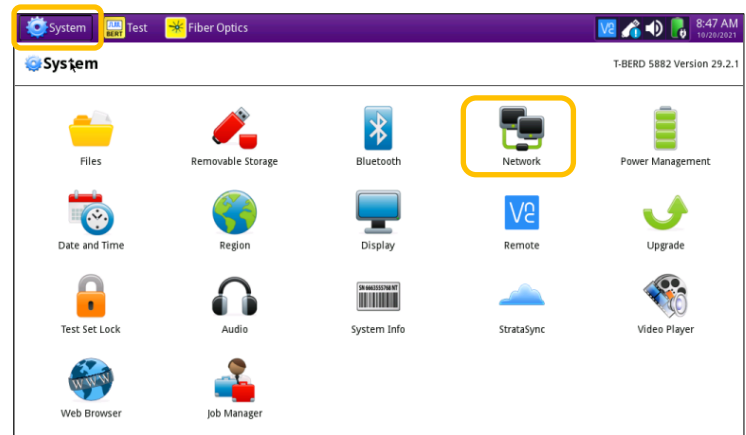


Figure 2: System Menu

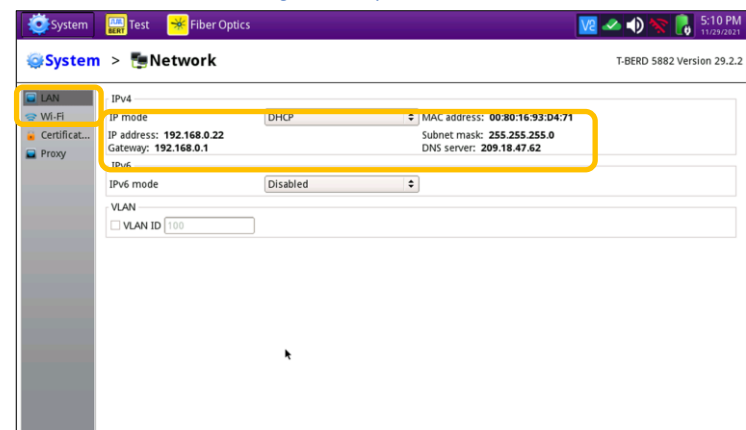




Figure 3: Network Menu

QUICK CARD

UPGRADE TEST SET

1. Tap the **System** icon  in the status bar at the top of the display to show the **System menu**.
2. Tap the **Upgrade** icon  to show the Upgrade menu.

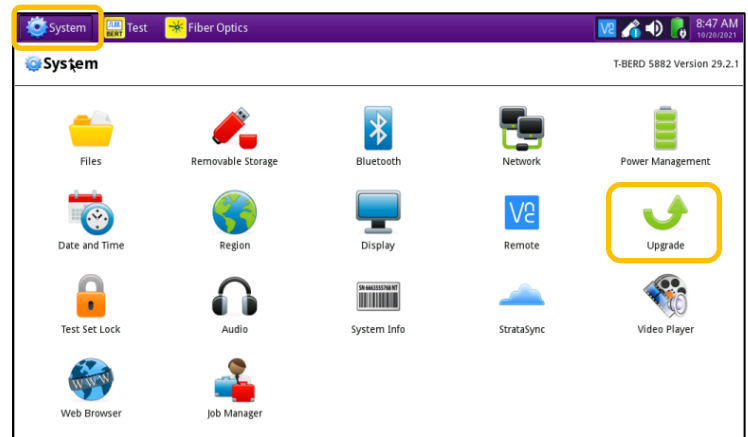




Figure 6: System Menu

3. Select **Network** for the upgrade method.

 **Network**
Download upgrade from a web server over the network.

4. Tap  **Connect**
Query the server for available upgrades.

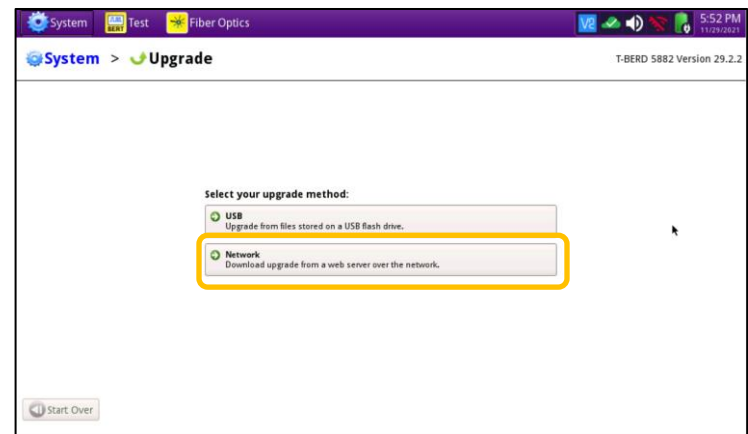
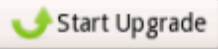


Figure 7: Upgrade Menu

5. Tap  and follow screen prompts to complete the software upgrade.
6. The unit will reboot to complete the upgrade.

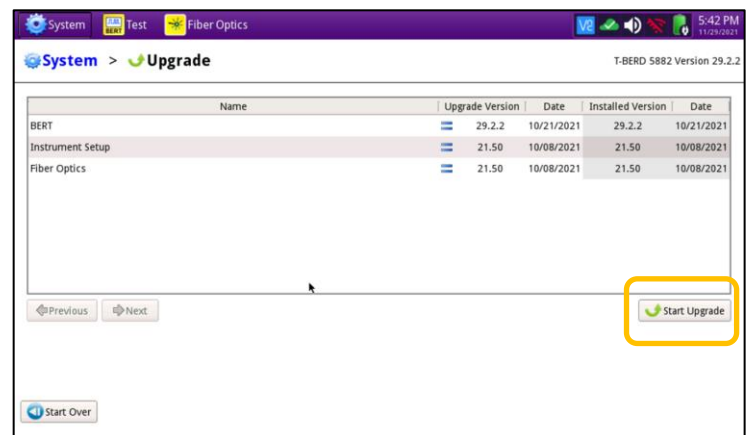


Figure 8: Upgrade Menu