

Getting Access to the StandAlone Remote DSAM

1. In an internet browser go to <http://catvsupport.com/index3.html>
2. On your right, under DSAM/TPP/FDM click on V4.7 Stand Alone Remote DSAM App.

PathTrak Return Path	DSAM/TPP/FDM
PathTrak 4.2 API Detail Document	DSAM V4.4 Release Notes/Firmware Upgrade FOR DSAM XI SERIES UNITS ONLY!!!!
PathTrak 4.2 CM MAC Import Utility	DSAM V3.8.4 Release Notes/Firmware Upgrade FOR DSAM NON-XI SERIES UNITS ONLY!!!!
How to set the IP on the new HCU1500SS	TPP V4.8 and V5.0
How to replace the SBC in an old HCU with the new 2500SBC	DSAM User Manual
PathTrak 4.x port requirements	FDM-100 V4.3
PathTrak 4.x Reverse Proxy Recommendation	How to obtain the CableLabs BPI+ certificate for DSAM
Installing PathTrak 4.x on a shared or remote drive	TPP V4.7 Getting Started Guide
PathTrak 4.x Server Configuration App Note	TPP V4.7 App Notes
PathTrak 4.x Admin Guide	TPP V4.7 Help Guide
PathTrak 4.2 User's Guide	DSAM Sync Troubleshooting Flow Chart
How to export and import a monitoring plan in PathTrak 4.x	Online DSAM Tutorial
HCU200 Setup Guide	DSAM/TPP SecureSync Setup App Note
PathTrak V2.7 Client	DSAM Diagnostic and VoIP Check server IPs
Stand alone UCD Import Tool V1.0	What is DSAM LHe-Sensitivity Mode and AGC Struss?
UCD Import Tool Users Guide	Basic DSAM FAQ list
HCU200 HSM-1000 Sharing Video Demo	How to configure TPP V4 for NAT or multiple IP addresses
How to set the IP address in an old HCU100 or HCU1500	V4.7 Stand Alone Remote DSAM App
WebView V2.1	Throughput Server Setup
PathTrak Firmware Package V3.06 for PathTrak Servers at v2.6 & v2.7 only	How to move a TPP database from an old machine to a new one
PathTrak Firmware Package V3.06 for PathTrak Servers at v1.5 to v1.9 only	


3. Once the .zip file downloads, extract the files in your desired destination folder (e.g. Desktop)

Name	Date modified	Type
Digital-SCTE-presentation.ppt	8/1/2016 1:22 PM	Microsoft Pow
FileZilla_3.20.1_win64-setup_bundled2.exe	8/4/2016 1:54 PM	Application
jdsu.cer	8/8/2016 8:38 AM	Security Certifi
jing.exe	8/2/2016 1:56 PM	Application
North American Payroll Schedule for 2016_Pu...	8/4/2016 2:15 PM	Microsoft Exce
npp.6.9.2.Installer.exe	8/8/2016 9:11 AM	Application
Remote_DSAM_SA_V4.7.zip	8/8/2016 12:19 PM	Compressed (z

4. Open the folder in which you extracted the files into.

Name	Date modified	Type
Remote_DSAM_SA_V4.7	8/8/2016 12:33 PM	File folder
Digital-SCTE-presentation.ppt	8/1/2016 1:22 PM	Microsoft Po
FileZilla_3.20.1_win64-setup_bundled2.exe	8/4/2016 1:54 PM	Application
jdsu.cer	8/8/2016 8:38 AM	Security Cert
jing.exe	8/2/2016 1:56 PM	Application
North American Payroll Schedule for 2016_Pu...	8/4/2016 2:15 PM	Microsoft Ex
npp.6.9.2.Installer.exe	8/8/2016 9:11 AM	Application
Remote_DSAM_SA_V4.7.zip	8/8/2016 12:19 PM	Compressed

5. Click on **RemoteDsam.jar** (This will open up the Remote DSAM app).

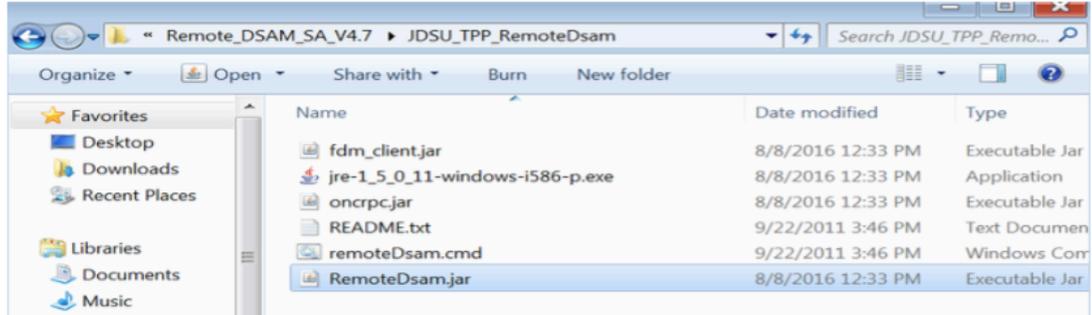

6. In your physical DSAM unit do the following:
- Go to **Configure**
 - Select **General**
 - Select **Diagnostics**
 - Choose **Virtual DSAM**
 - Wait for DSAM to pull an IP Address
7. Now in you Remote DSAM app do the following:
- On the top row options, select **connection**
 - Then click on **connect to meter** (ctrl+c)
 - In the pop-up command screen, **type the same IP Address that the DSAM has** (Found under Virtual DSAM).
 - Once the light in the status bar is green on the DSAM, you will be connected and able to operate the DSAM virtually.

NOTE: Make sure your DSAM unit is connected to an Ethernet connection and to a power source.