

# How to sync SmartOTU with NTP server



## Description:

How to sync SmartOTU with NTP server

## Scenario:

If the customer prefers that SmartOTU doesn't update the time or timezone from the user each time someone connects.

## Solution/Steps Taken:

You can activate NTP for SmartOTU through the following SCPI commands (configure, then activate):

```
OTU:API:CONF:NTP:CONF STATIC,"xxx.xxx.xxx.xxx"
```

where xxx.xxx.xxx.xxx is the NTP server ipv4 or name